



Basic DSL Connection Instructions

Single-Port Modem with One Computer

Your DSL Modem

Front View



Back View



Step 1: Connect the Cables

- From Left to Right:
1. Phone cord
 2. Ethernet network cable
 3. Power cord



Step 2: Connect the DSL Line

1. Connect filter to phone jack on wall
2. Connect DSL Modem to “DSL” port on the filter
3. Connect phone to “Phone” port on the filter
4. Plug power cord into household electrical outlet



Step 3: Install inline filters

Any other phone jack in the house with anything connected like a phone, fax machine, satellite dish receiver, etc., should have an inline filter installed like this:




Step 4: Connect the Computer

Typical desktop computer.
Connect yellow ethernet cable to ethernet port on computer.



Typical laptop computer.

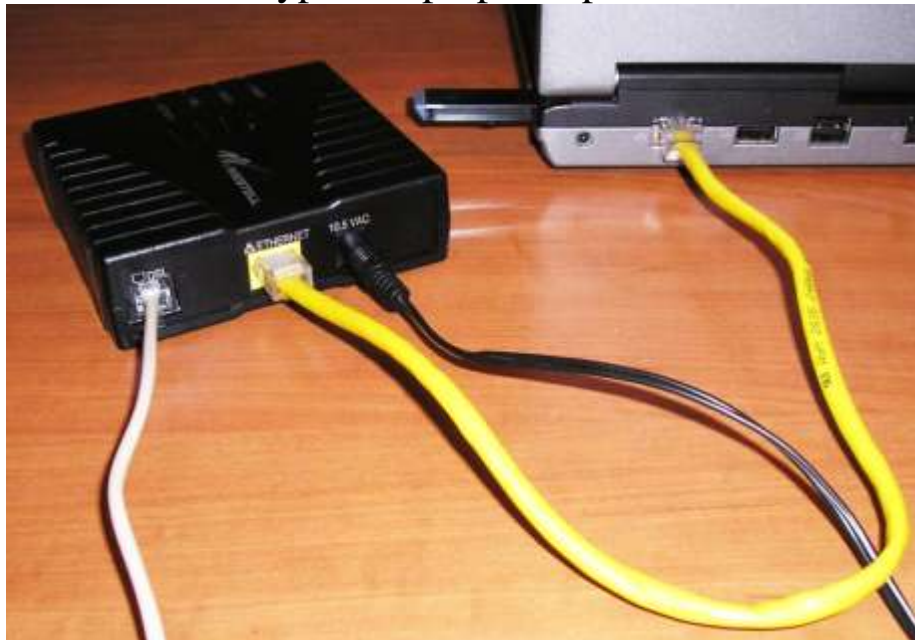

Step 5: Confirm Connection

Lights on the DSL Modem should look like this:

POWER: Solid Green

READY: Solid Green

LINK: Solid Green

ACTIVITY: Intermittent blinking



Problems Connecting?

READY light blinking?

Call 326-3700 for technical support.